


Instruction Manual / Bedienungsanleitung

Quick Rack Repair Kit (Part Nr. EXQRRK)


1. Press defect hook out with a vise (M16 screw nut + **16mm M4 flat head screw**)

Defekten Haken mit einem Schraubstock auspressen (M16 Mutter + 16mm M4 Senkkopfschraube)

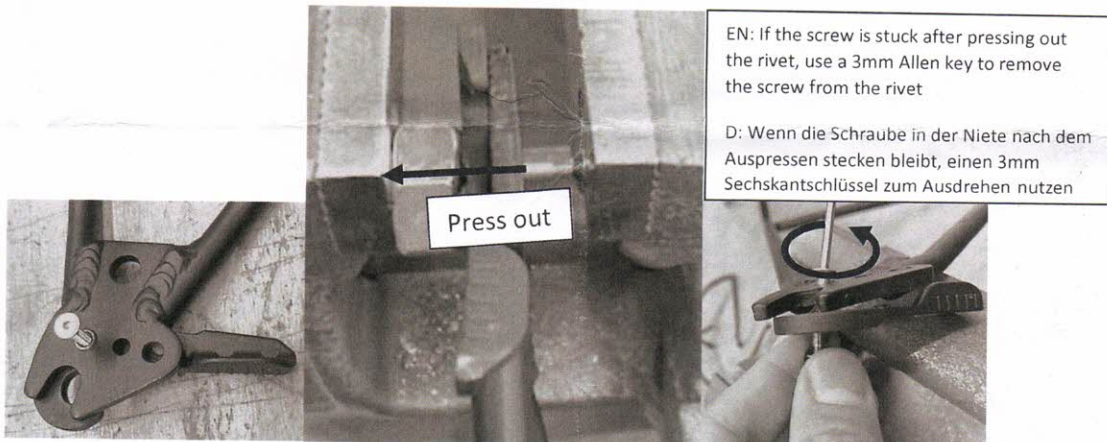

2. Screw in new Hook (**16mm M5 lens head screw** + M5 screw nut)


Neuen Haken einschrauben (16mm M5 Linsenkopfschraube + M5 Sicherungsmutter)

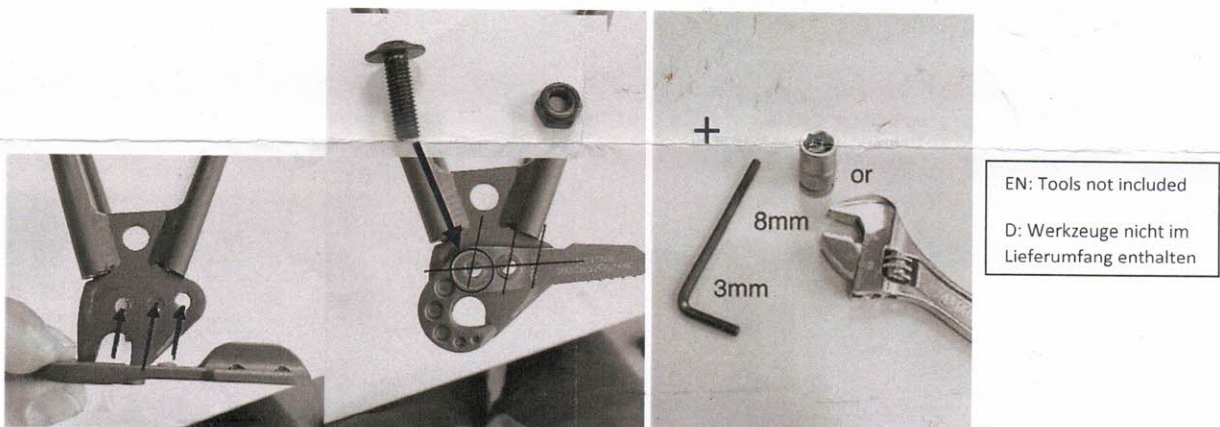

3. Check for secure mounting

Korrekte (sichere) Montage prüfen

Option 1 (screw head outside)

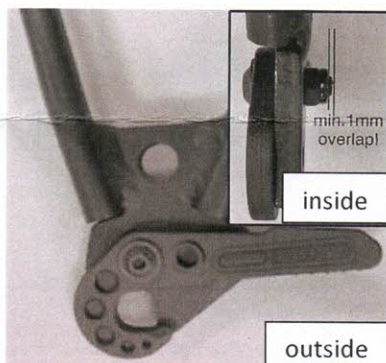

Option 2 (M5 screw nut outside)



EN: If you don't have enough space between drivetrain or frame and the M5 screw nut, switch the orientation of the screw (screw from inside out / M5 nut is outside)

D: Wenn nicht genug Platz zwischen der Kette / Kassette oder dem Rahmen und der M5 Sicherungsmutter ist, drehe die Schraubposition um (von innen nach außen schrauben / M5 Sicherungsmutter sitzt außen)

WA189 3224

