

# Dyson Bikes 2-button Display Instructions

## 1. Turning on and off

To switch on the bike, press the '+' button. To switch off, press and hold the '+' button.

The display will automatically power off after an extended period of inactivity to conserve battery power.

## 2. Battery level

The current state of battery charge is shown on position 1 of the display. When fully charged 4 bars will be shown. As you ride the number of bars will decrease. Note, it is normal for the number of bars to decrease then return under high loads such as climbing hills.

## 3. Pedal assist levels (PAS)

In normal operation you have the choice of five levels of assistance with '1' being the lowest to '6' the maximum level of assist (position 7). You can also ride without assistance in level '0', trip and ODO will still function in this mode.

## 4. Backlight

When riding at night or in low light conditions you can activate the backlight function to help read the display by press and holding '+' key for 2-seconds. It can be switch off again by pressing and holding '+' for 2-seconds.

## 5. Walk function

The walk function is activated by pressing and holding the '-' key. The bike will be propelled along at approximately 6kph or less. This feature is intended to be used when pushing the bike, not when riding to help climb steep inclines.

## 6. Speed

The approximate road speed in kilometres per hour is shown in position 3 of the display.

## 7. Trip/ODO function

The display records trip distance, (position 8 'TRIP') and total distance travelled (position 2 'ODO'). You can cycle between the two reading by briefly pressing both '+' and '-' at the same time. The trip distance can be reset by pressing and holding both the '+' and '-' keys at the same time for approximately 4-seconds, after a few seconds the display will return to the normal state . Note, if the bike is ridden without the display on the distance travelled during this time will not be recorded.

If you need any further information please feel free to contact us on 03 9532 3132 or by email [info@dysonbikes.com.au](mailto:info@dysonbikes.com.au).

